
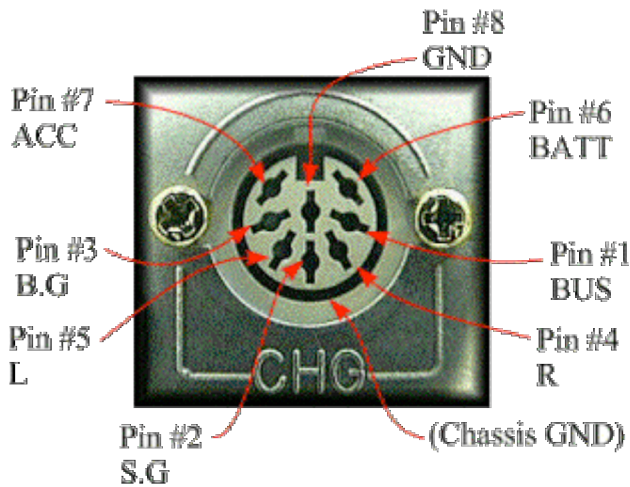


PhatBox and Alpine Changer wiring diagrams

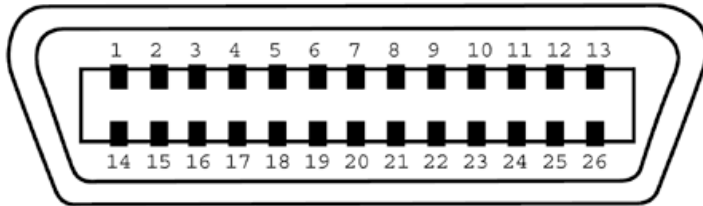

#1	Left	White
#2	Right	Red
#3	Signal GND	Shield
#4	GND	Brown
#5		
#6		
#7		
#8	Kenwood CH-REQ-IN	
#9	Kenwood CH-DATA-OUT	
#10	+12 BATT	Purple
#11	Kenwood CH-REQ-OUT	
#12	SCLK	Orange
#13	+12 BATT	
#14	+12 ACC	Yellow
#15		
#16	GND	
#17	Kenwood CH-MUTE-IN	
#18		
#19		
#20		
#21	I-BUS CH IN/OUT (BMW)	
#22	Kenwood CH-CLK-IN/OUT	
#23		
#24	Data TX (VW)	Black
#25	Data RX (VW)	Green
#26		

Pin	Name	PB pin(s)
#1	Bus IN/OUT	PB #21
#2	Signal GND	PB #3
#3	Bus GND	PB #4
#4	Right	PB #2
#5	Left	PB #1
#6	+12 BATT	PB #13 & #10
#7	+12 ACC	PB #14
#8	GND	PB #16 & #4

Thanks to Dave Regis for supplying this information for Traffic Pro Users. Please see the [Traffic Pro Users web pages](http://www.waycoolinc.com/z3/01/081501/becker.html) at <http://www.waycoolinc.com/z3/01/081501/becker.html> for more information.